


# GENERIC VASCAR II HOOKUP

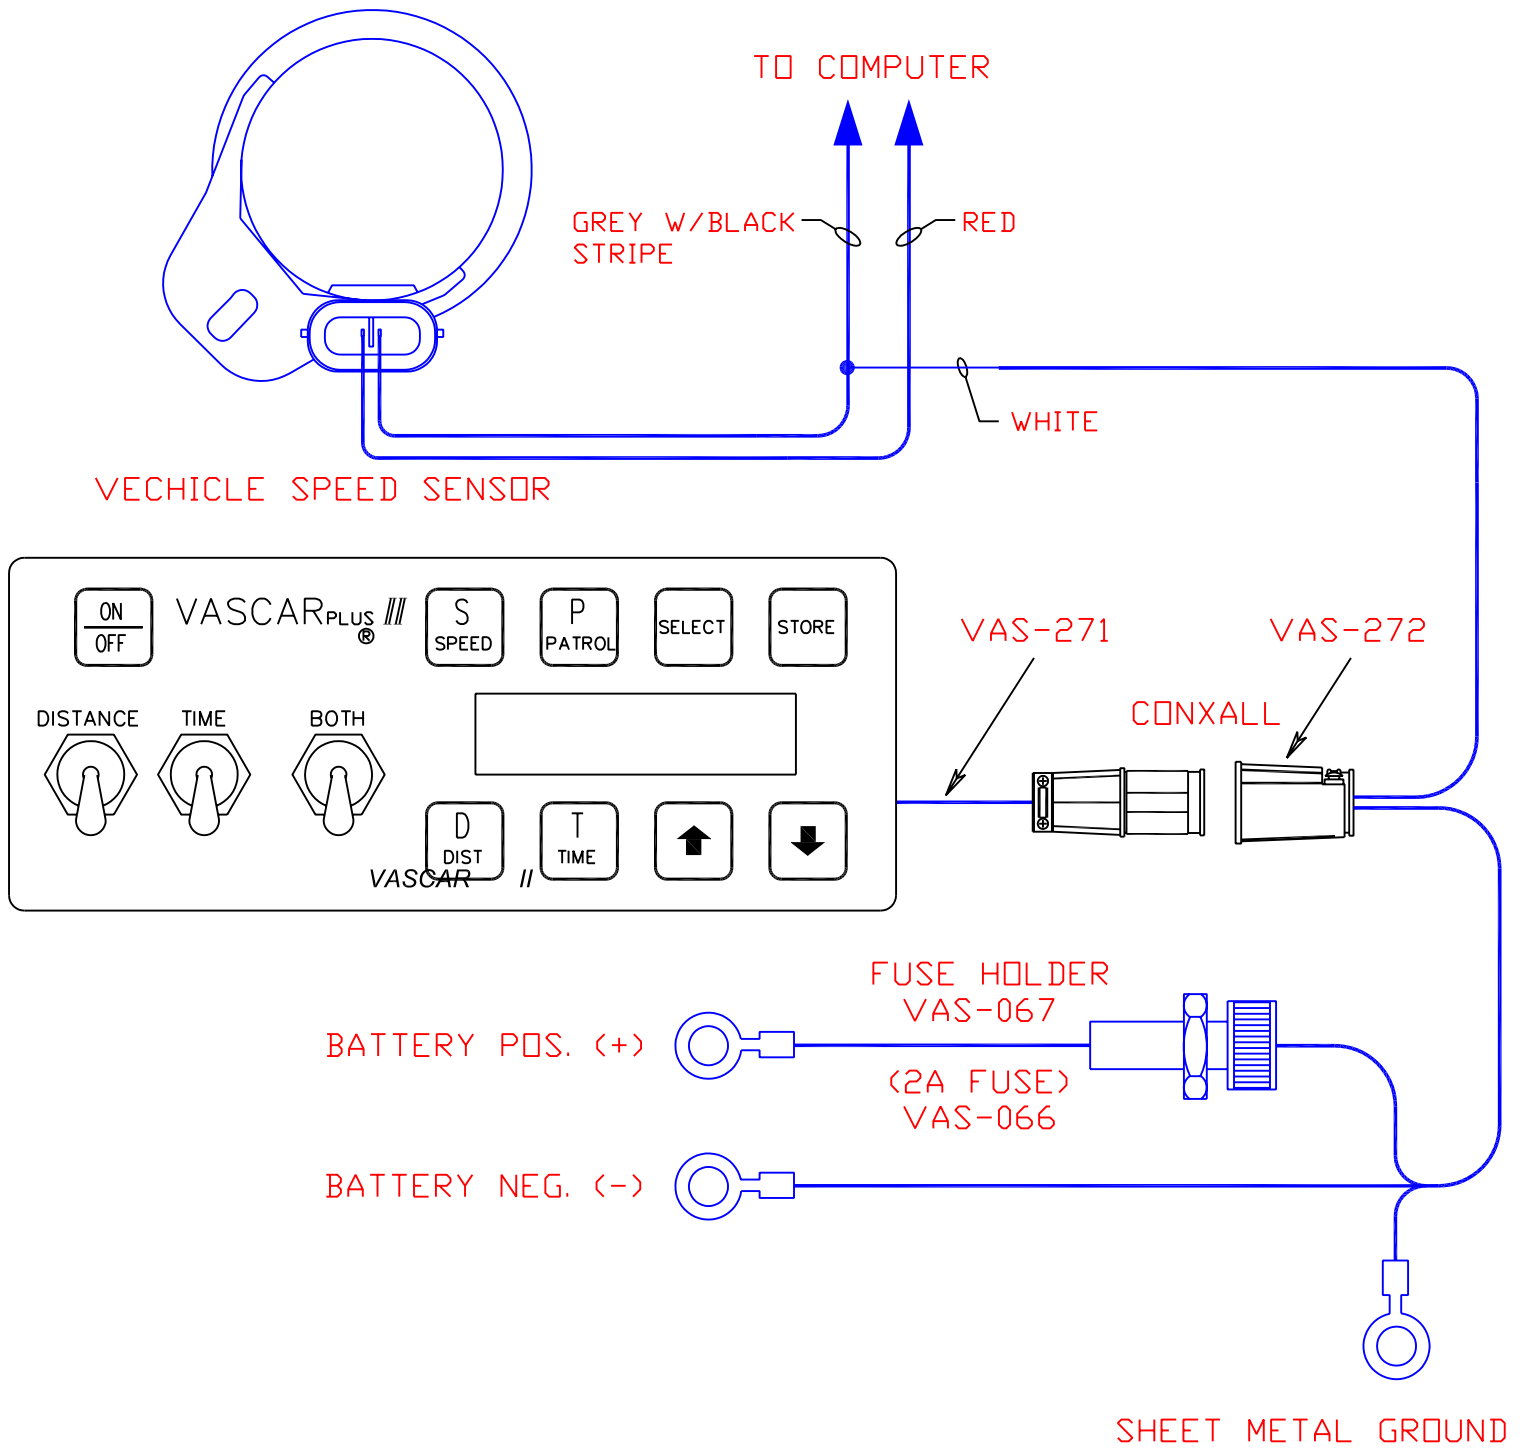

## INSTRUCTIONS

LOCATE SPEED SENSOR ON TRANSMISSION HOUSING. BOTH RED AND GREY WITH BLACK STRIPE WIRE WILL EXIT THIS HOUSING. SPLICE THE WHITE WIRE FROM THE SUPPLIED CABLE TO THE GREY, BLACK STRIPED WIRE. THE GREY, BLACK STRIPED WIRE MAY ALSO BE ACCESSIBLE FROM THE ENGINE COMPARTMENT BUT EXACT LOCATION CAN VARY.

**TRAFFIC SAFETY SYSTEMS**  
A DIVISION OF POWER SYSTEMS & CONTROLS, INC.  
3206 LANVALE AVE.  
RICHMOND, VIRGINIA 23230  
(804) 353-3826